


Replacement of the wheel



1. Remove the axle lock and the washer.



2. Remove the hubcap.

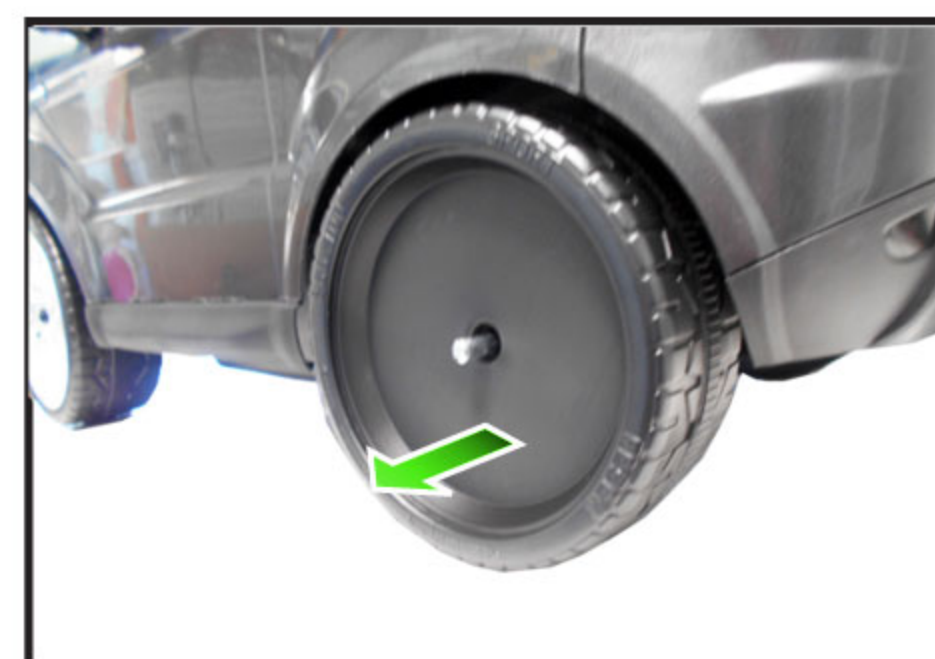

3. Remove the wheel and replace with a new one. Re-assemble in reverse order.


Replacement of the mechanism




1. Remove the axle lock and the washer.



2. Remove the hubcap.

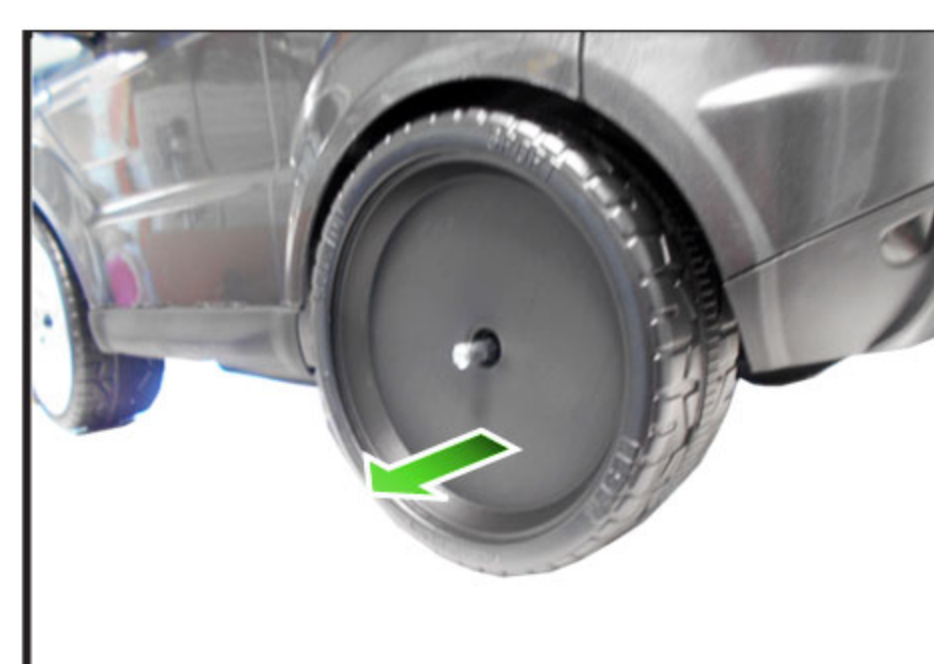


3. Remove the wheel and replace with a new one.

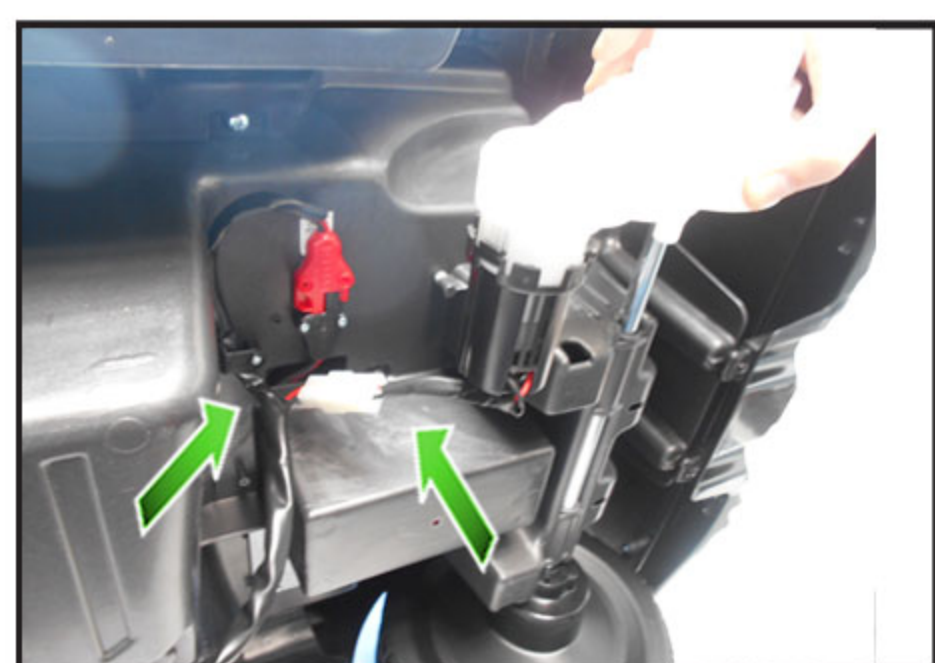


4. Turn 180° and disconnect the wires.




5. Remove the mechanism.

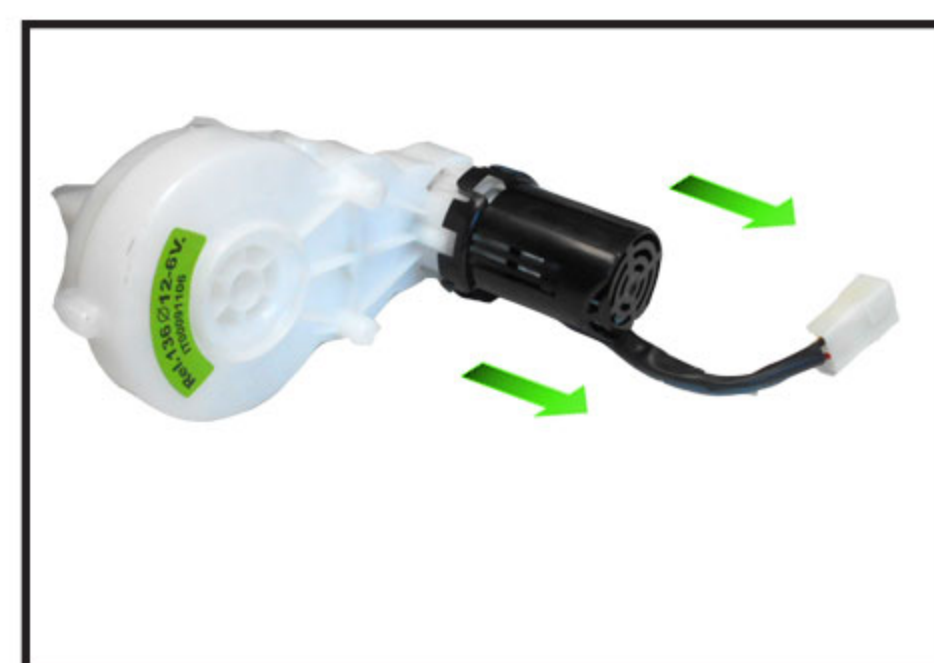

6. Remove the black cover of the mechanism.

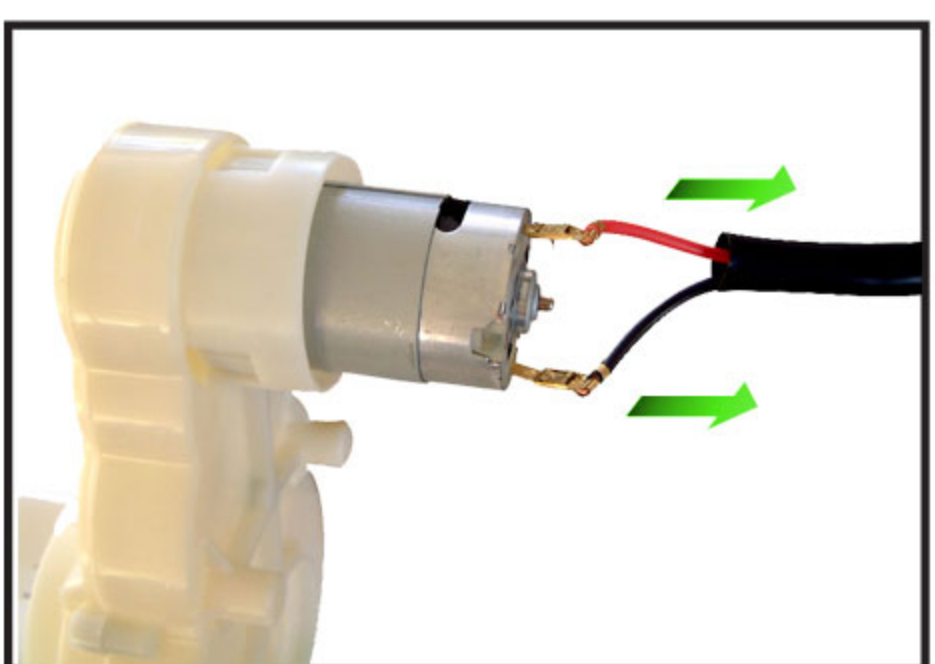

7. Disconnect the wires of the mechanism to replace it with a new one. Re-assemble in reverse order.

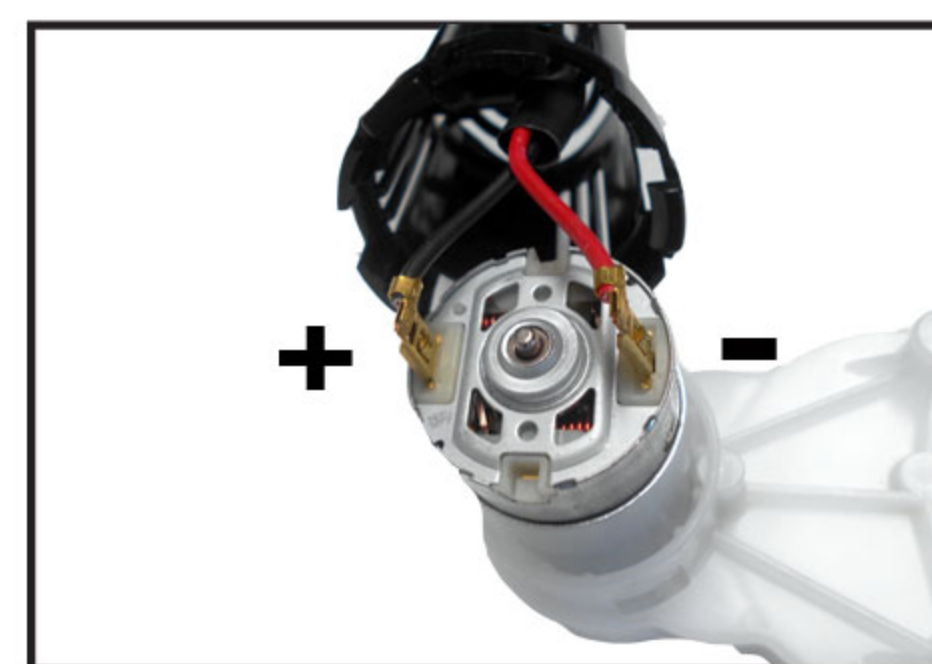


Note: Connect the wires in same polarity order of the previous mechanism.


Replacement of the battery




1. Unscrew the 2 screws from the seat.

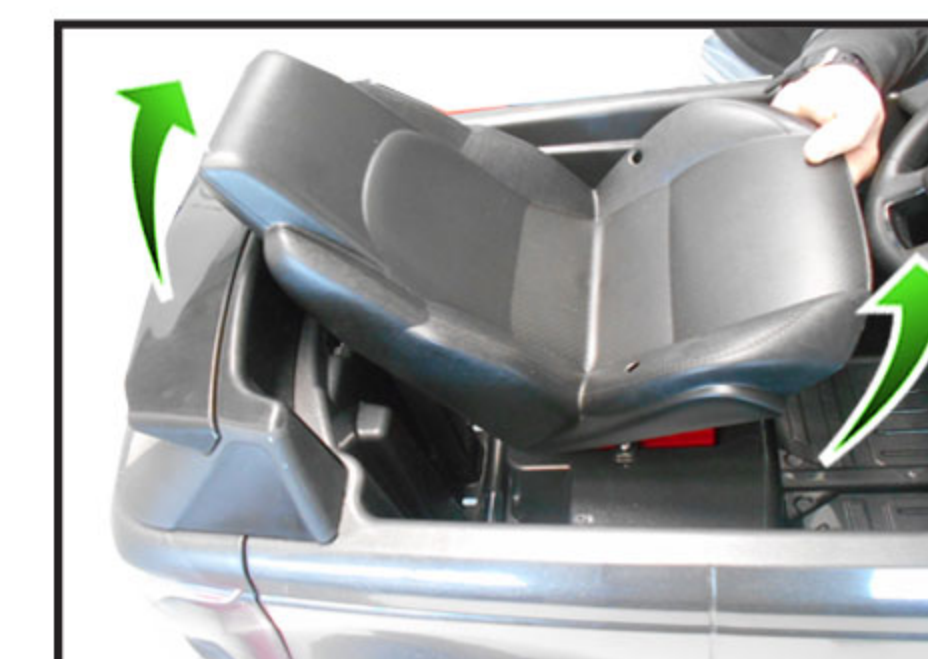


2. Remove the seat.

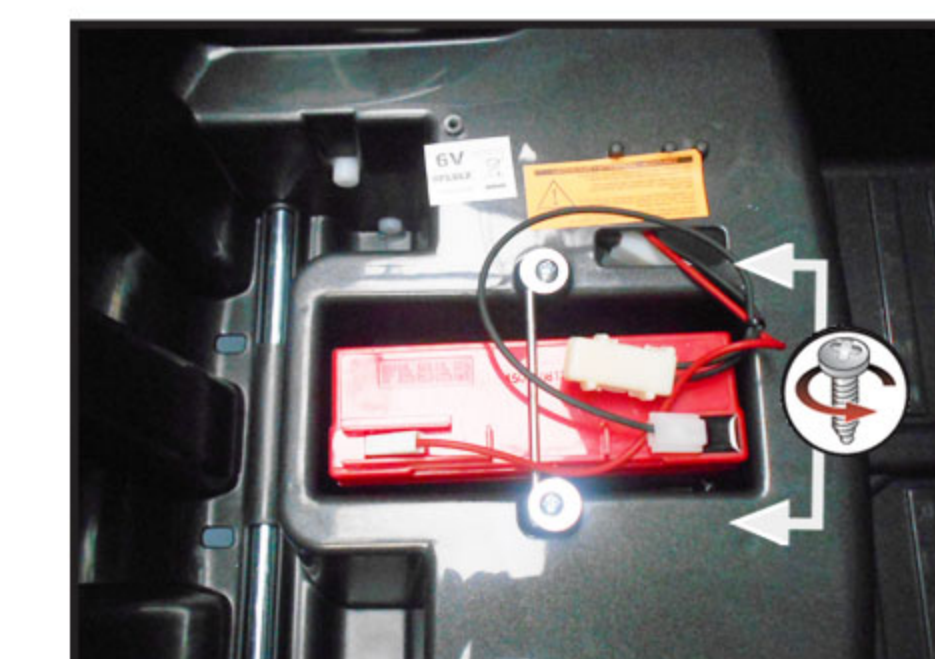

3. Unscrew the axle to remove the battery.

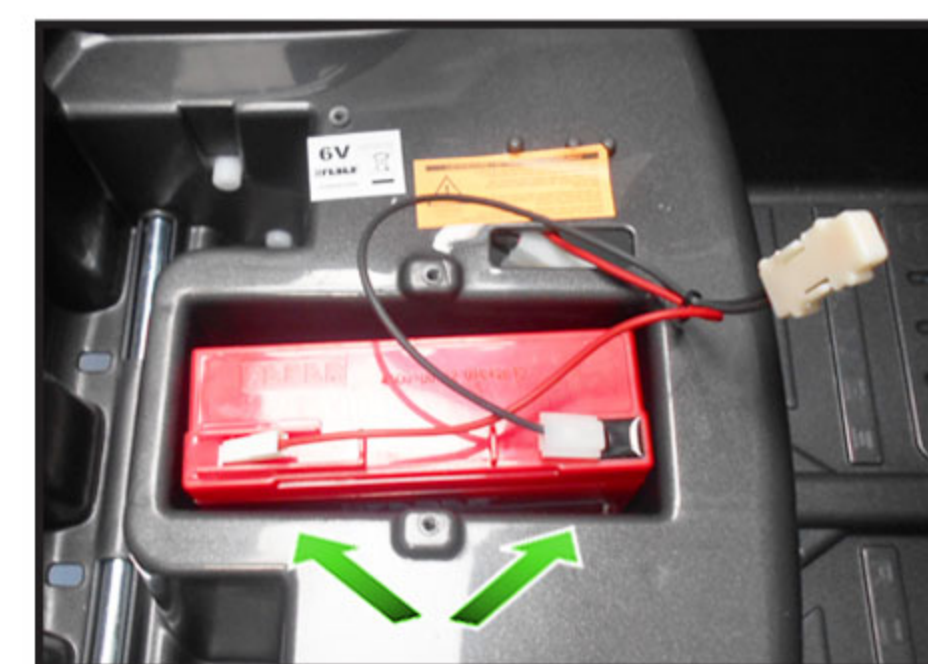

4. Disconnect the wires from the battery.

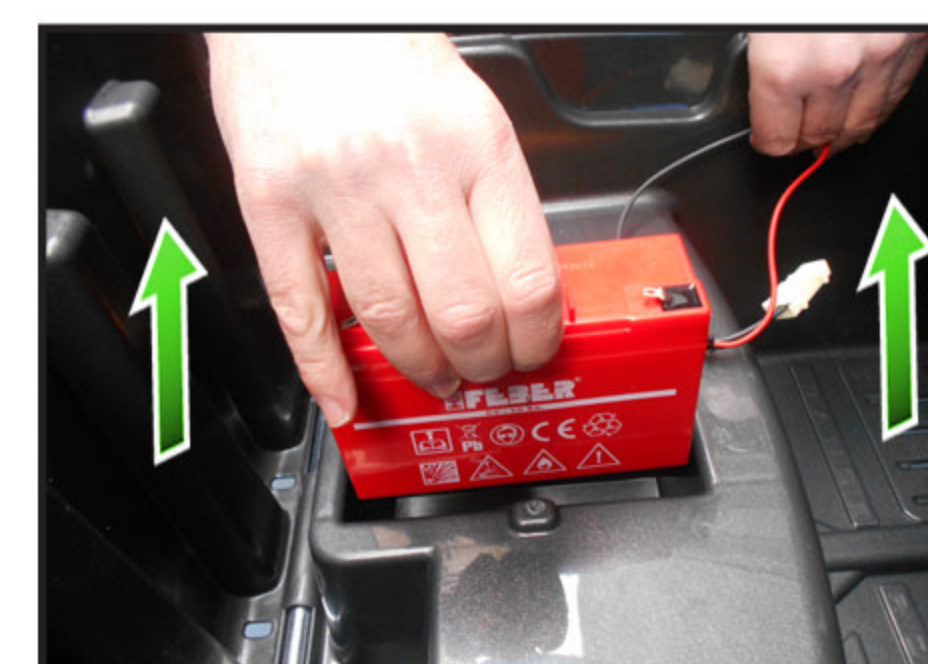


5. Remove the battery and replace with a new one. Re-assemble in reverse order and pay attention to connecting the wires to the proper polarity.


Replacement of the circuit breaker




1. Unscrew the 2 screws from the seat.

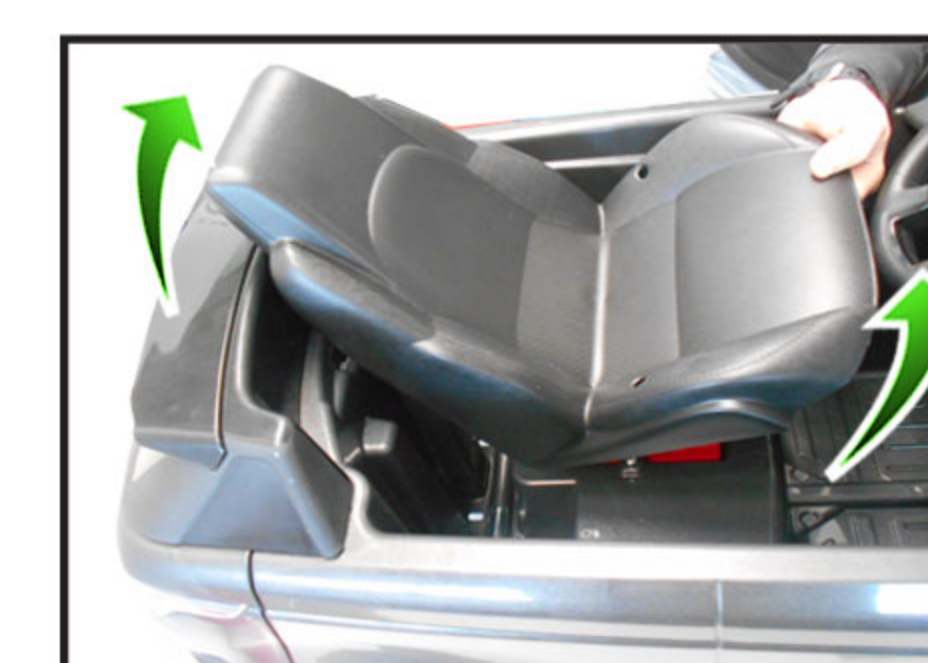

2. Remove the seat.

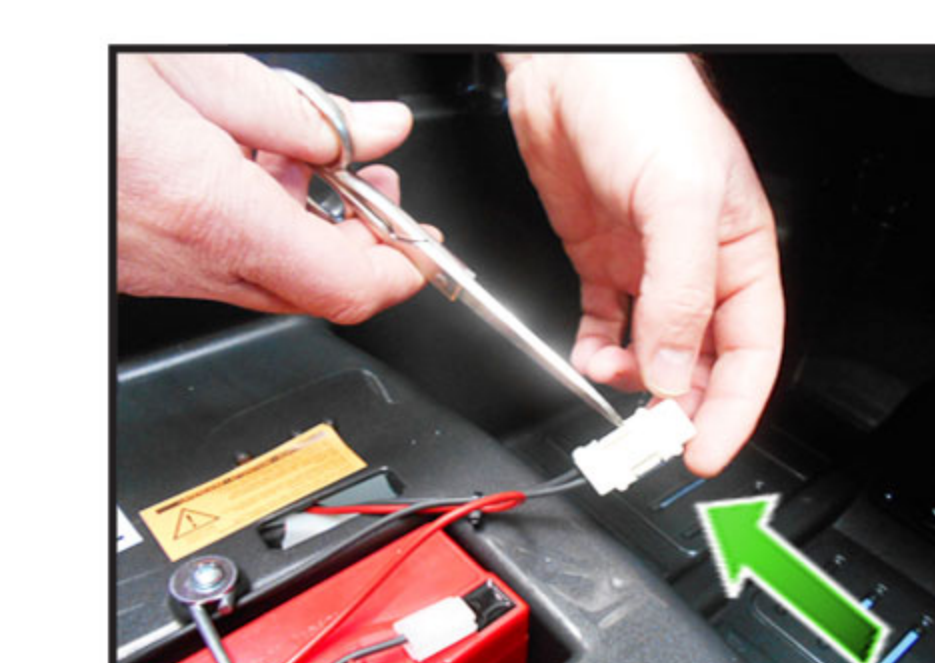

3. Remove the white cover of the circuit breaker.

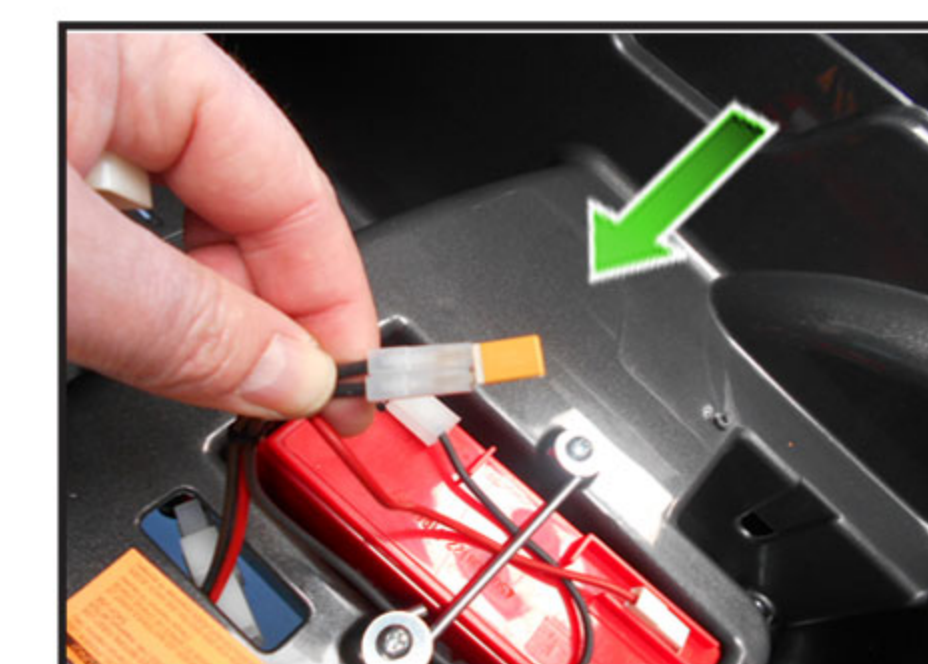

4. Remove the circuit breaker and replace with a new one..



5. Fasten the white cover and re-assemble in reverse order.