

Replacement of the wheel



1. Remove the little cap.



2. Remove the aranlock and the hubcap.




3. Remove the wheel and replace with a new one. Re-assemble in reverse order.

Replacement of the button switch




1. Unscrew the 2 screws and remove the accelerator rubber.

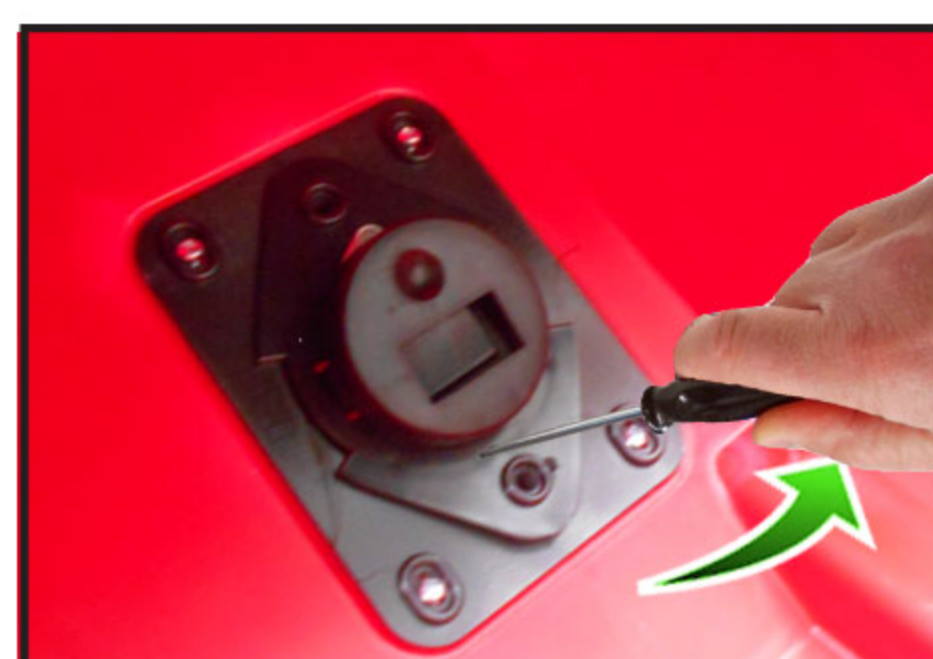

2. Remove the accelerator button.



3. Remove the button switch.

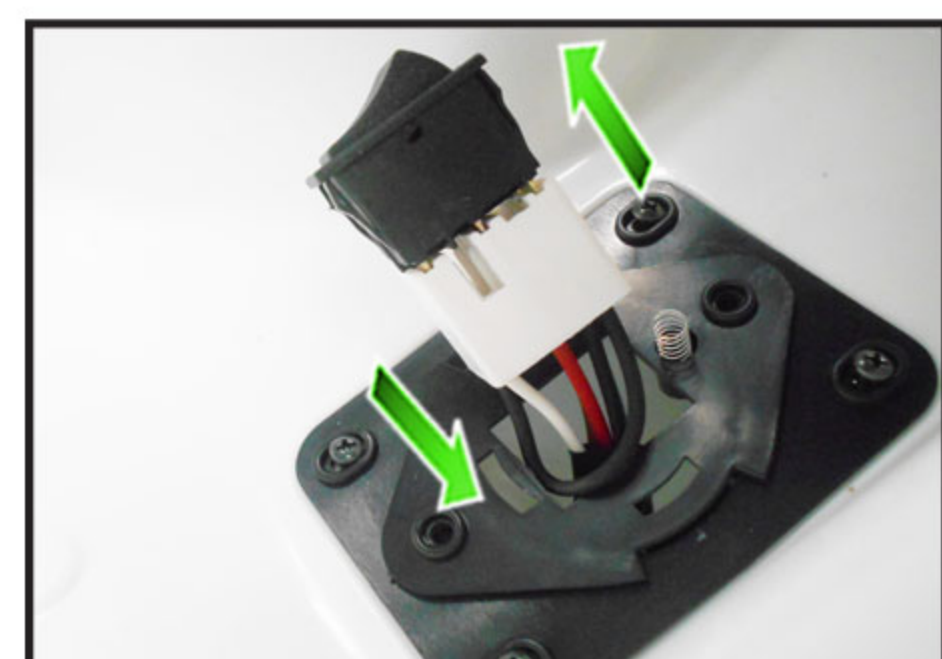

4. Disconnect the wires and replace it with a new one. Re-assemble in reverse order.

Note: Pay attention on connecting the button switch and the wires in the correct way.

Replacement of the mechanism



1. Unscrew the front side of the seats and remove them.




2. Remove the turn signals to find the screws.




3. Unscrew the back side of the car.



4. Remove the back side of the car.

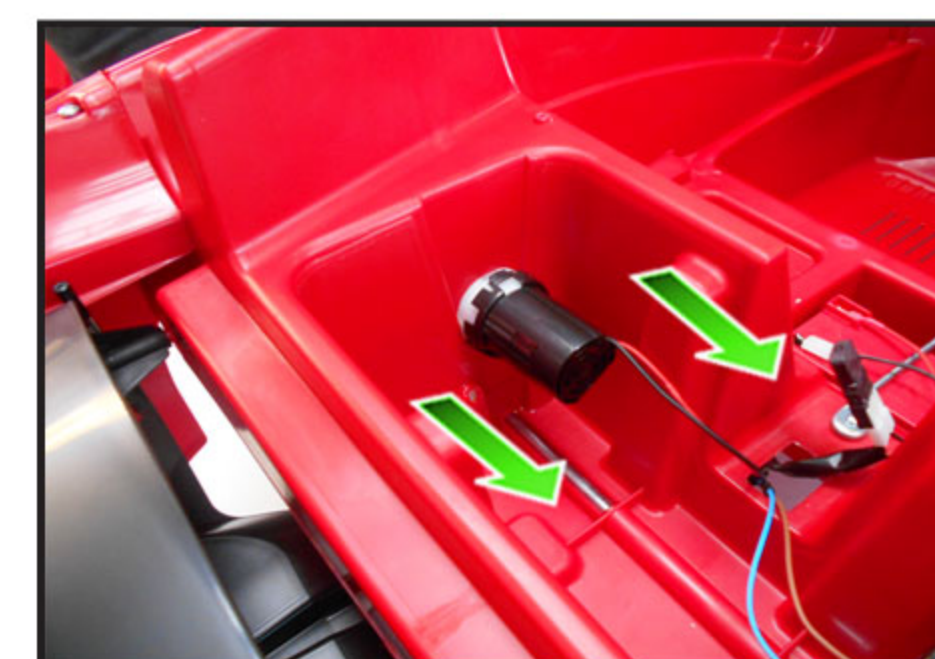

5. Remove the black cover of the mechanism.

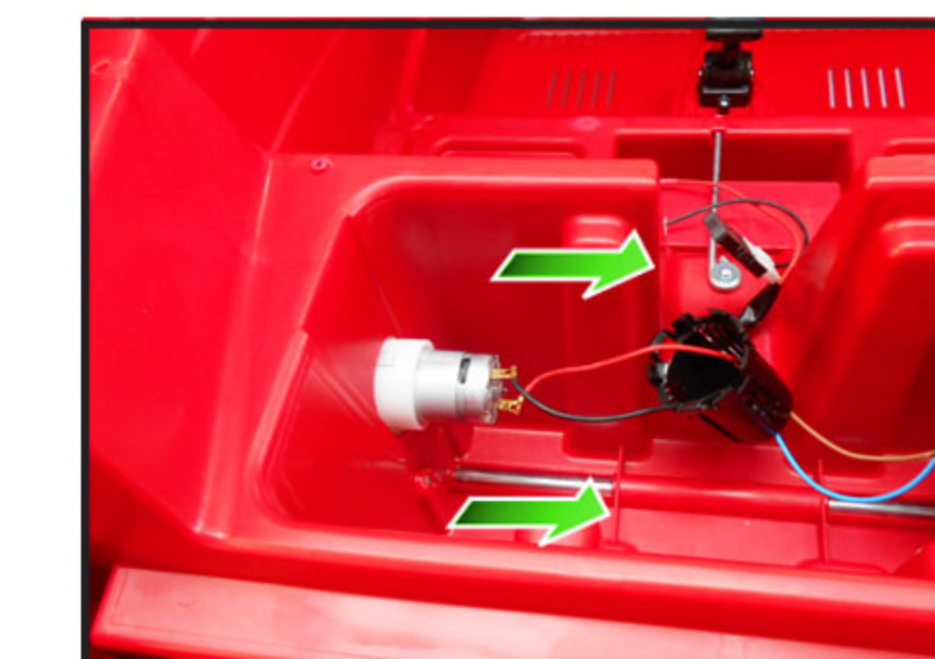


6. Disconnect the wires from the mechanism.




7. Remove the little cap.




8. Remove the aranlock and the hubcap.

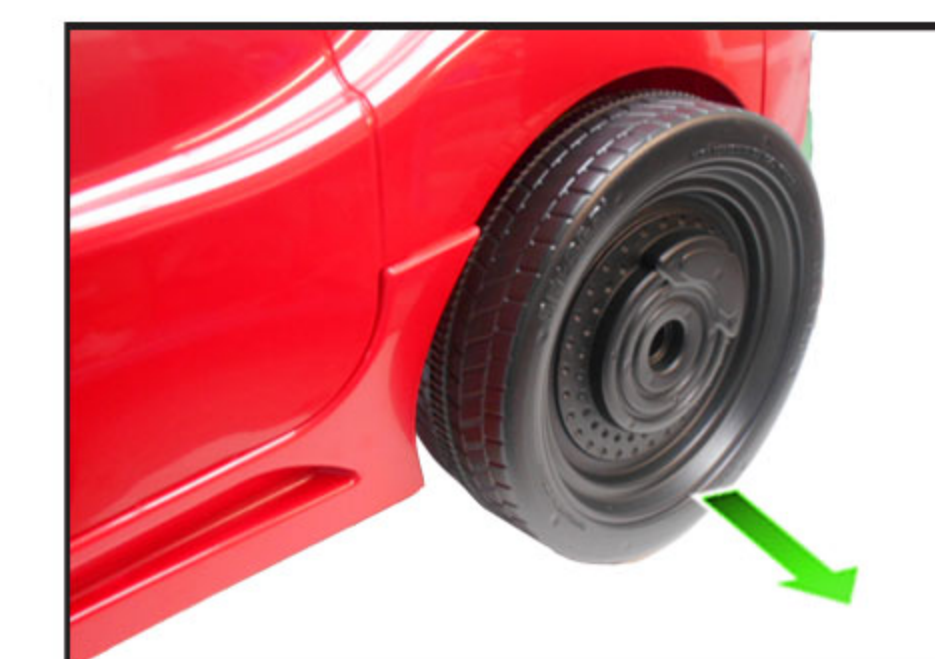

9. Remove the wheel. Re-assemble in reverse order.

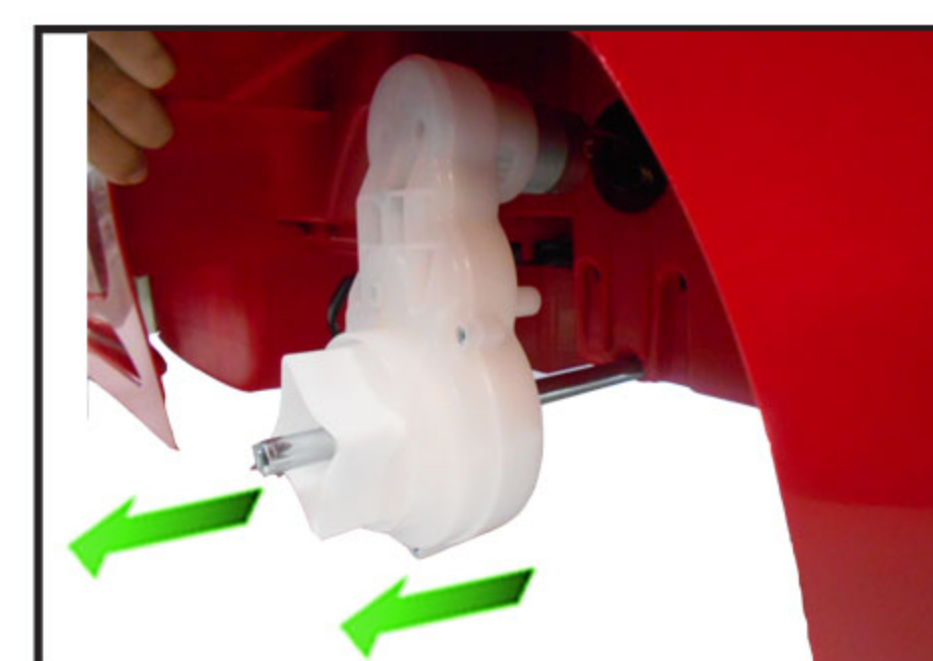

10. Remove the mechanism and replace with a new one. Re-assemble in reverse order.

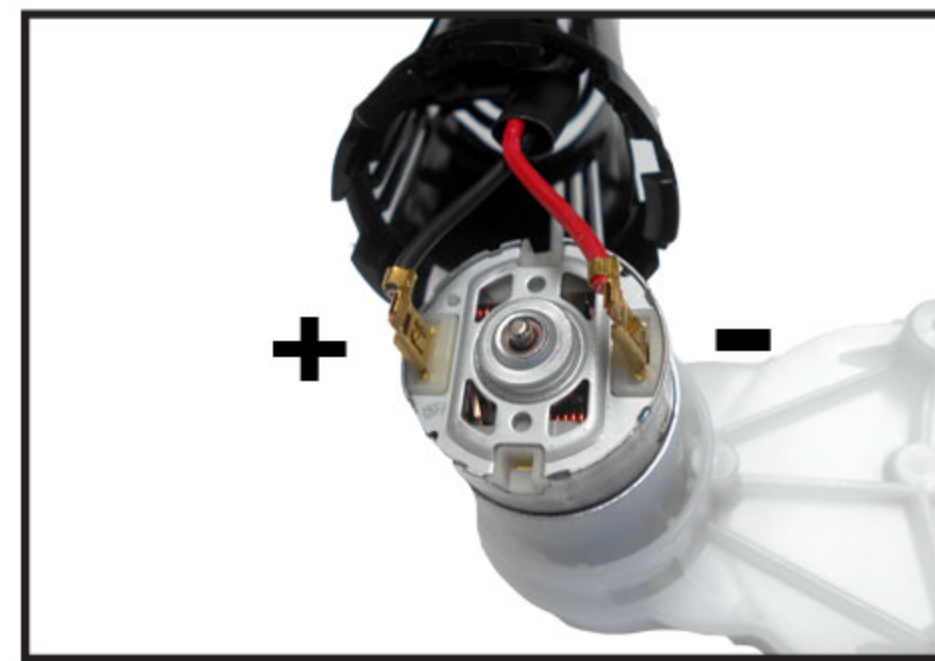

Note: Connect the wires in same polarity order of the previous mechanism.


Replacement of the battery




1. Unscrew the front side of the seats and remove them.



2. Unscrew the axle.

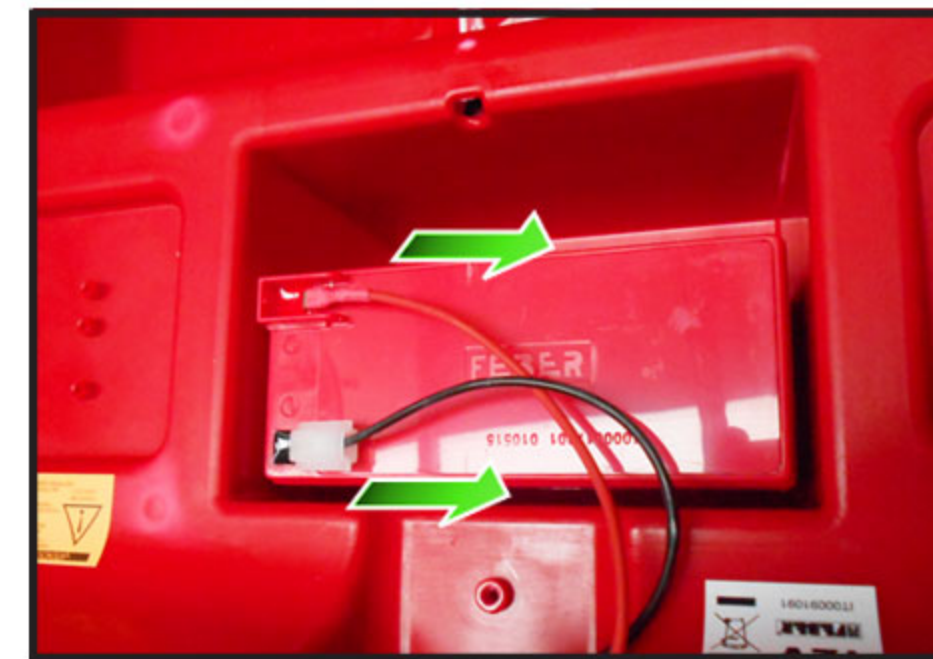

3. Disconnect the wires from the battery.

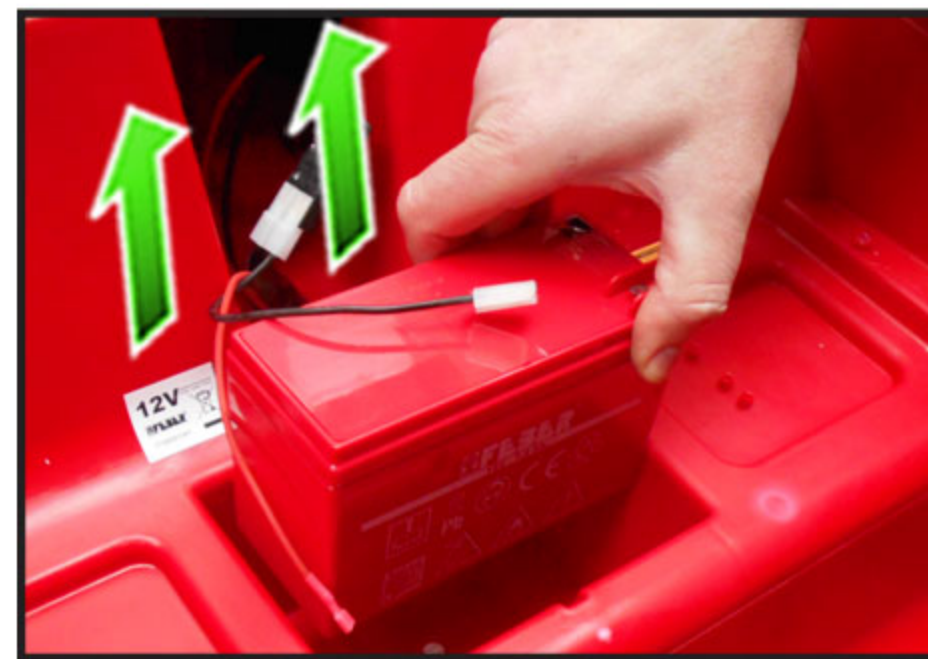

4. Remove the battery and replace with a new one.
Re-assemble in reverse order and pay attention to connecting the wires to the proper polarity.


Replacement of the charge wiring.



1. Unscrew the front side of the seats and remove them.




2. Unscrew the axle.

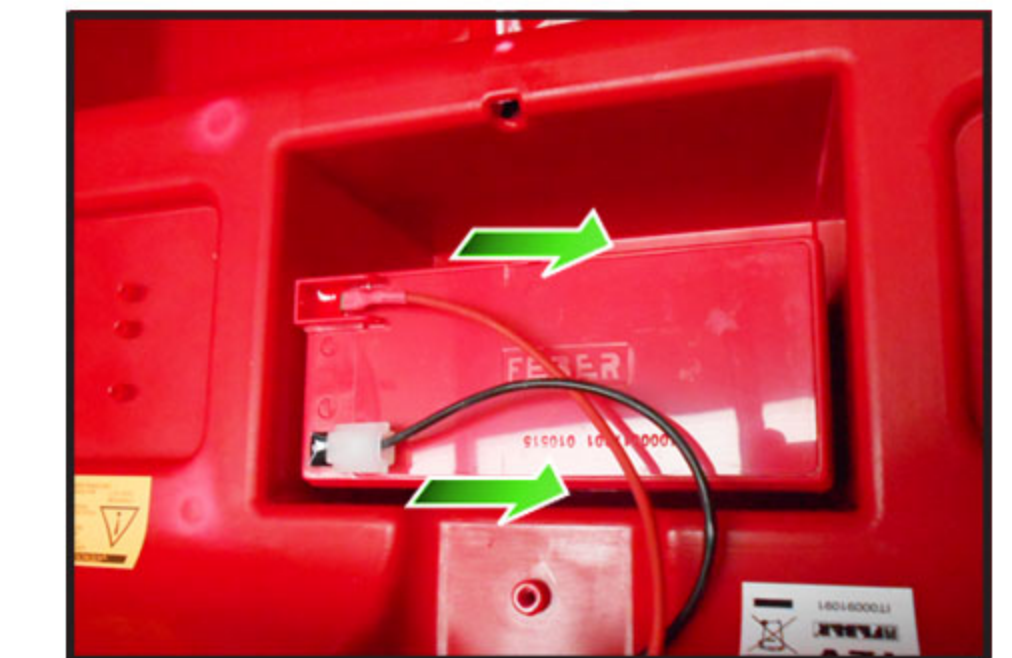

3. Disconnect the wires from the battery.



4. Turn 180° and disconnect the wires.

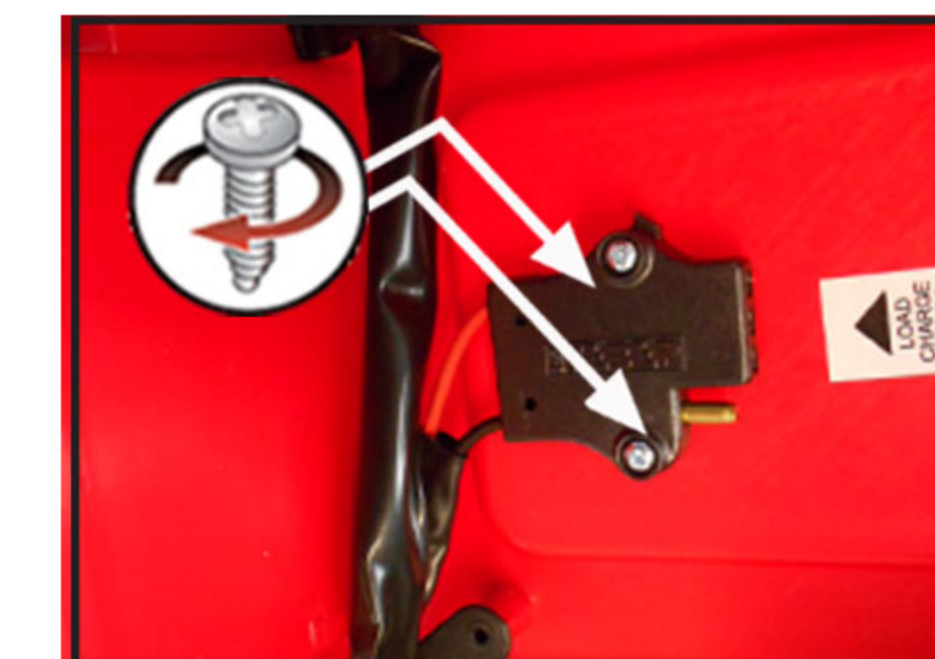

5. Unscrew the black wire.




6. Replace the wires and re-assemble in reverse order.
Note: Pay attention to connecting the wires to the proper polarity marked on the battery.

Replacement of the circuit breaker



1. Unscrew the front side of the seats and remove them.

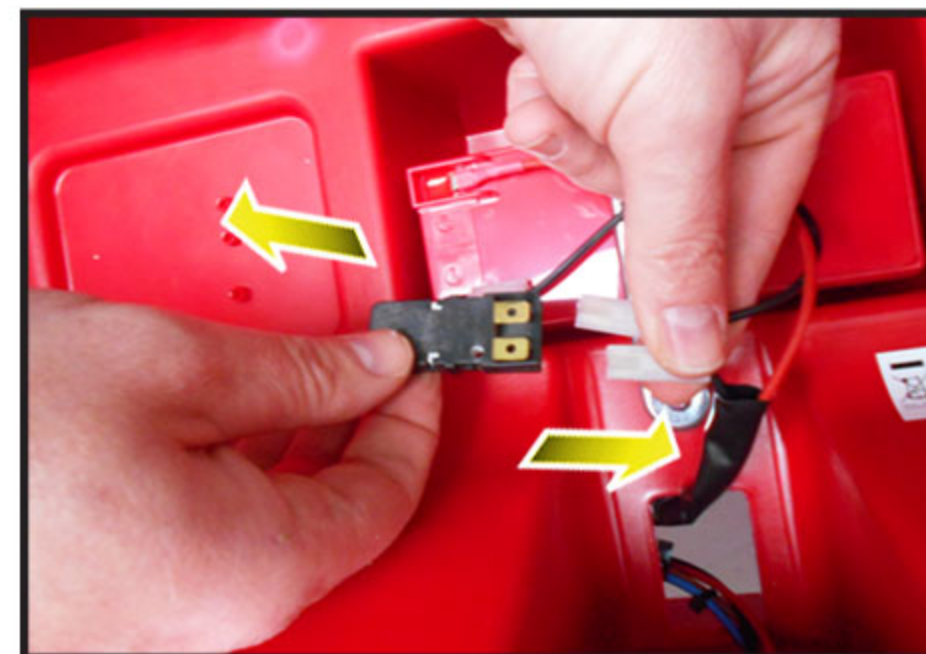

2. Remove the circuit breaker.



3. Replace with the new one and re-assemble in reverse order.

Replacement of the gear switch



1. Unscrew the gear stick.



2. Remove the switch



3. Disconnect the switch and replace it with a new one.
Re-assemble in reverse order. Pay attention to connecting the button switch and the accelerator in the correct way.