

## Replacement of a wheel




\*Box End Wrench 17mm.

1. Unscrew the nut whilst holding the nut on the other side, to remove it.



2. Remove the hubcap.

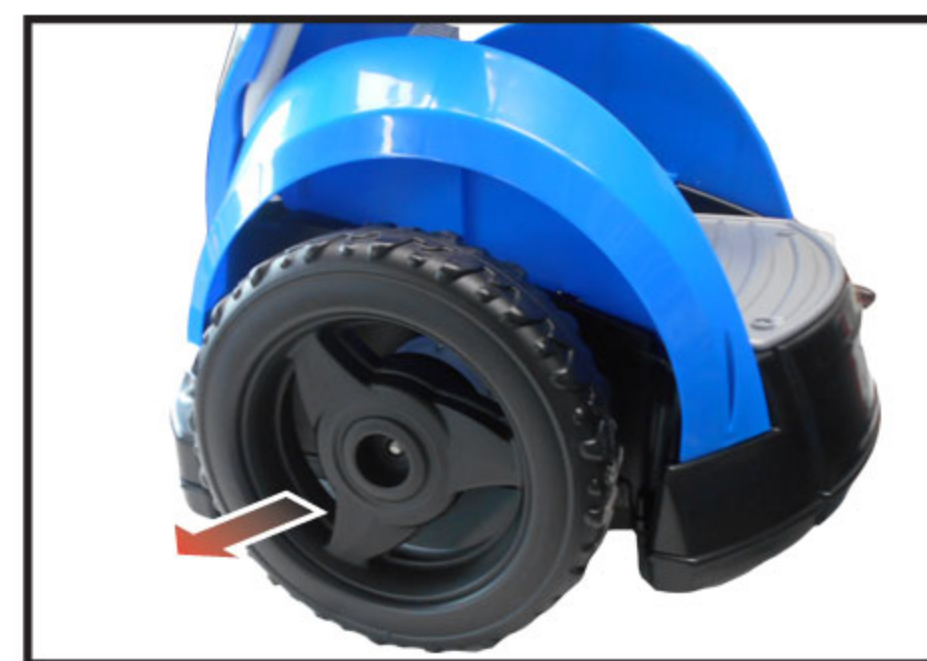

3. Remove the wheel.

## Replacement of a mechanism




\*Box End Wrench 17mm.

1. Unscrew the nut whilst holding the nut on the other side, to remove it.




2. Remove the hubcap.

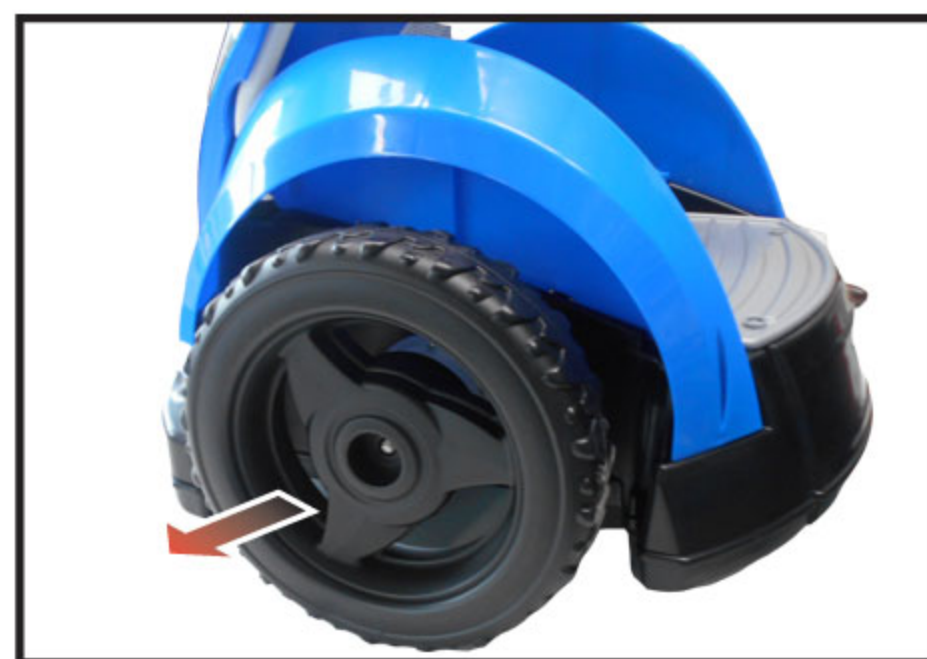

3. Remove the wheel.




4. Remove the axle with the other wheel.

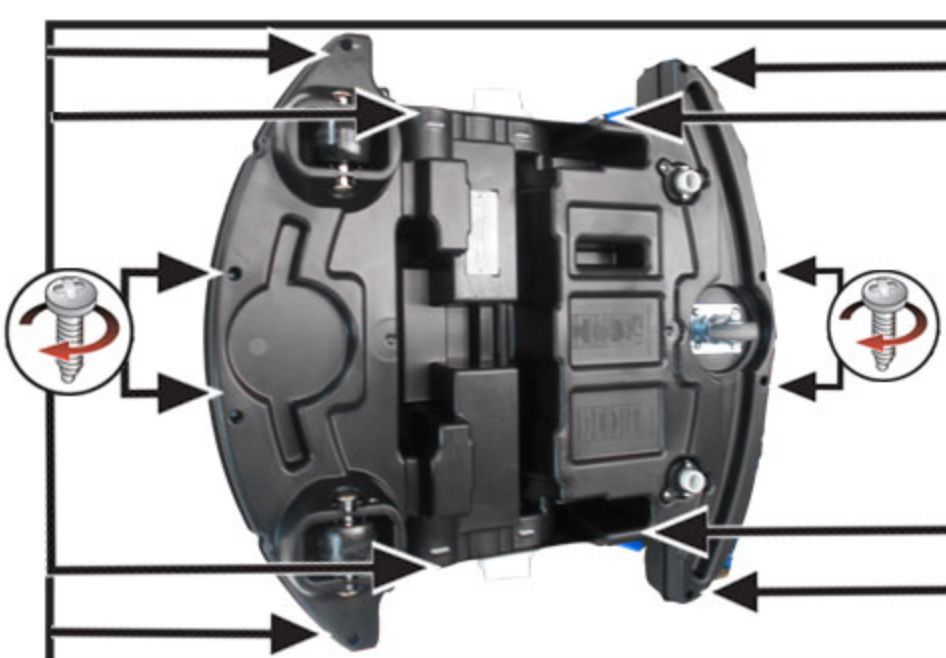


5. Turn 180° to operate. Unscrew the dareway base.




6. Unscrew both white tubes from dareway base.

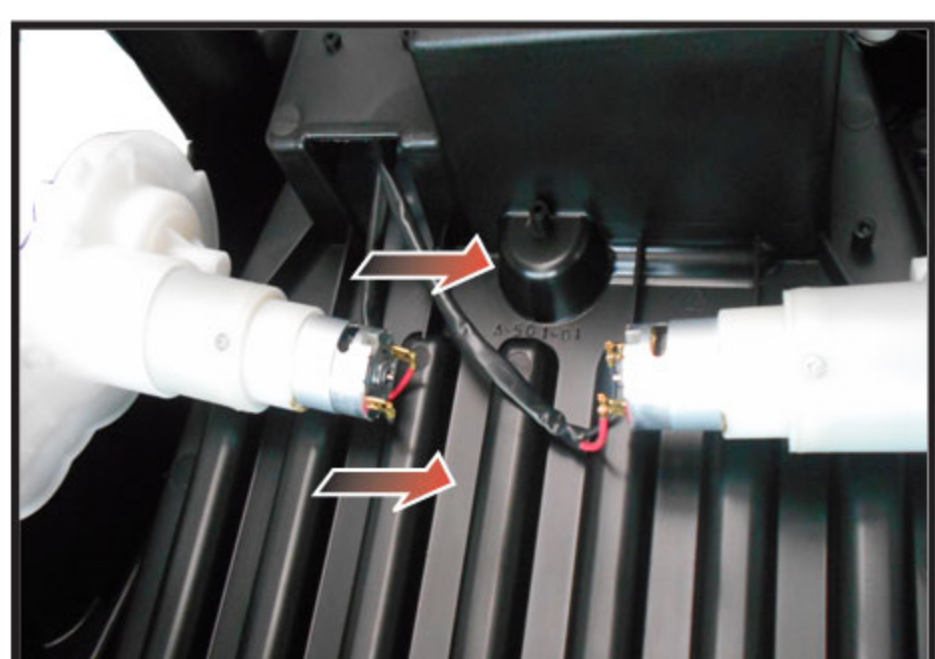

7. Disconnect the wires of the mechanism t.

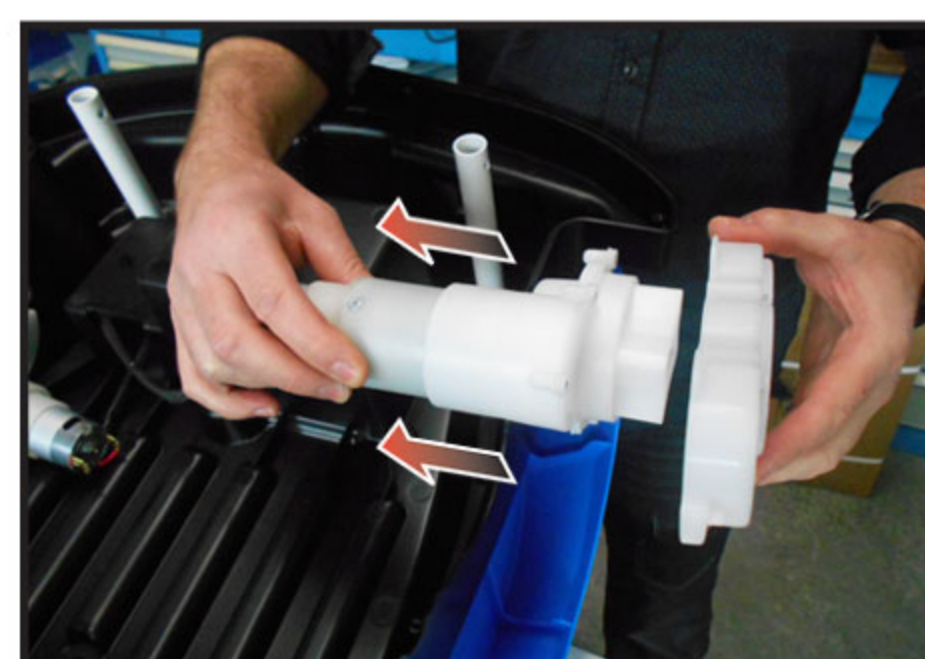

8. Separate the cover of the mechanism to replace it with a new one. Re-assemble in reverse order.

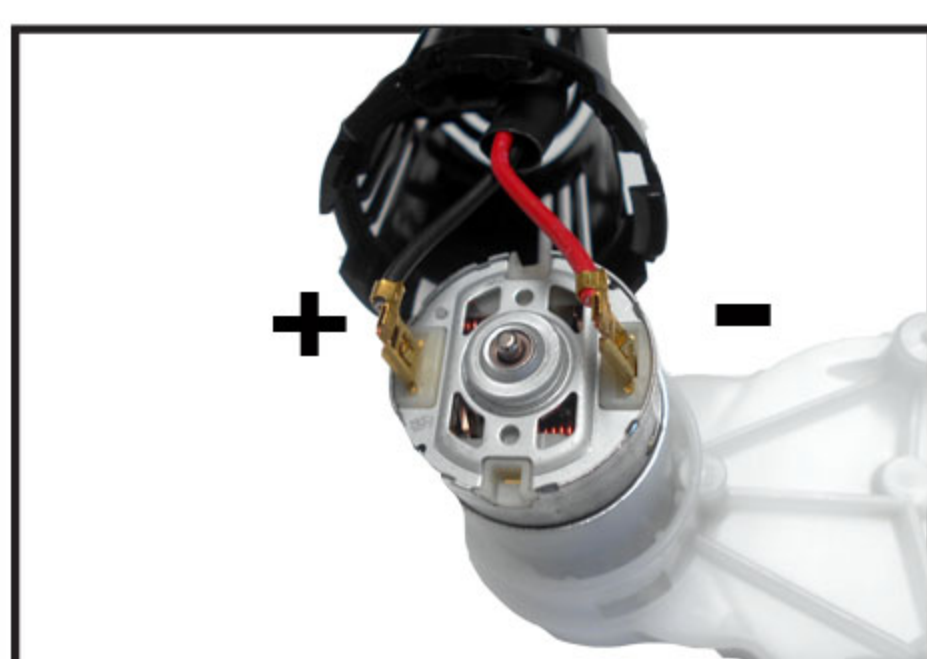

Note: Connect the wires in same polarity order of the previous mechanism.

## Replacement of the battery



1. Unscrew the 4 screws from the dareway base.



2. Unscrew the axle to remove the battery.




3. Disconnect the wires from the battery.




4. Remove the battery and replace with a new one. Re-assemble in reverse order and pay attention to connecting the wires to the proper polarity.

## Replacement of the castor wheel

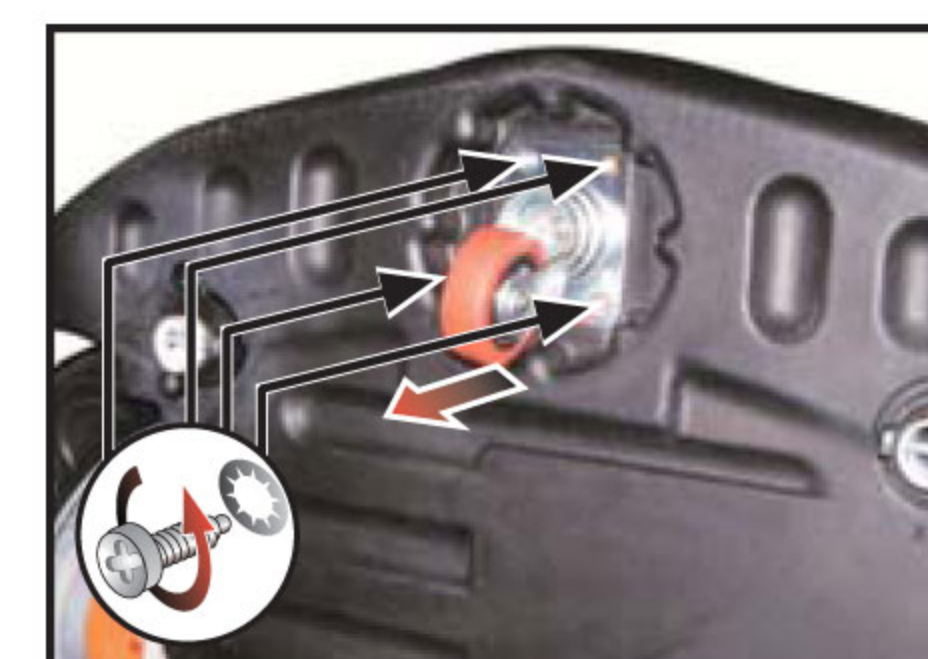

1. Unscrew the 4 screws and replace the castor wheel with a new one.

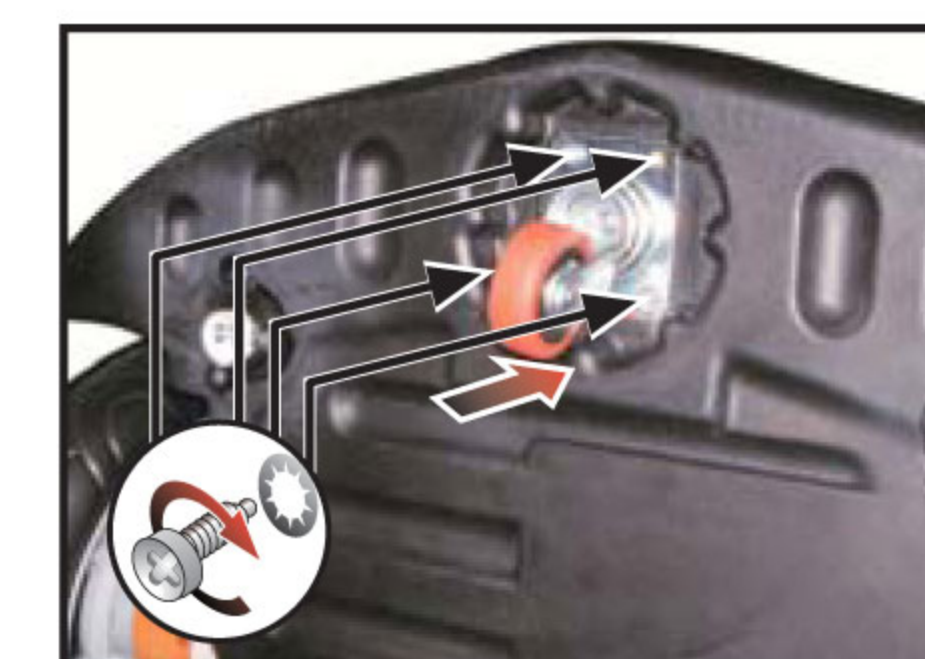


2. Re-assembly in reverse order.



## Replacement of the button switch



1. Unscrew the 2 screws and remove the accelerator rubber.

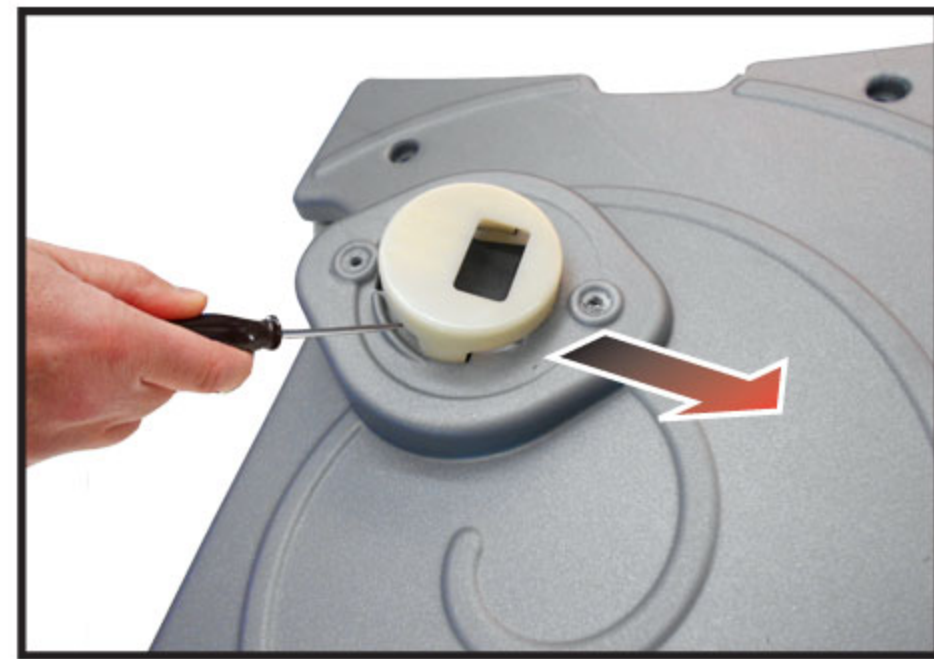

2. Remove the accelerator button.



3. Remove the button switch.



4. Disconnect the button switch and replace it with a new one. Re-assemble in reverse order.

## Replacement of the circuit breaker




1. Unscrew the 4 screws from the dareway base.




2. Disconnect the circuit breaker to replace it with a new one. Re-assemble in reverse order.

## Replacement of handlebar button

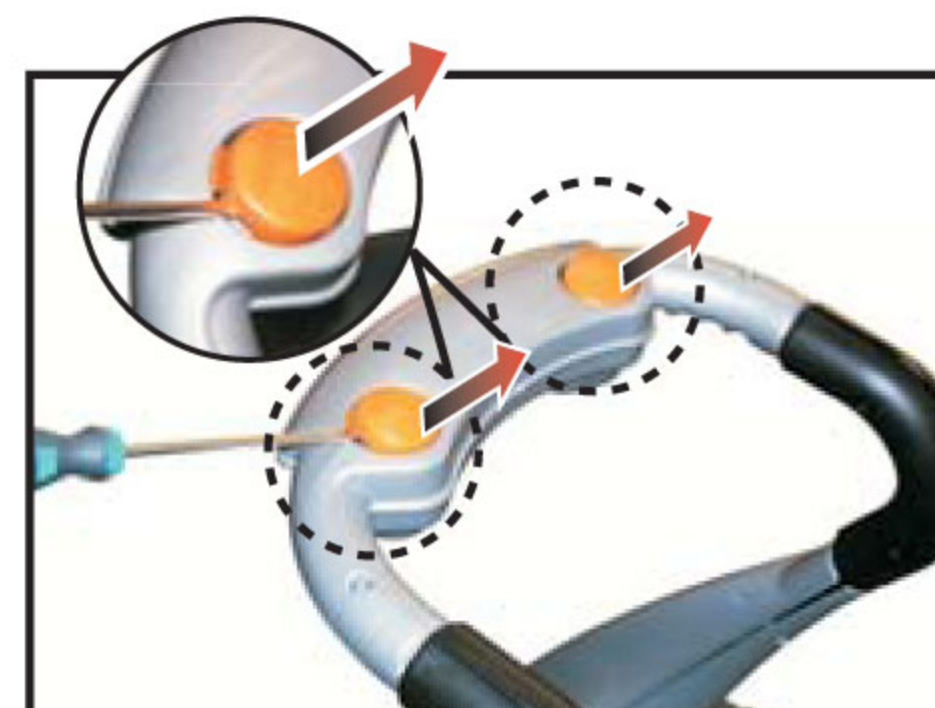

1. Remove the button of the handlebar.

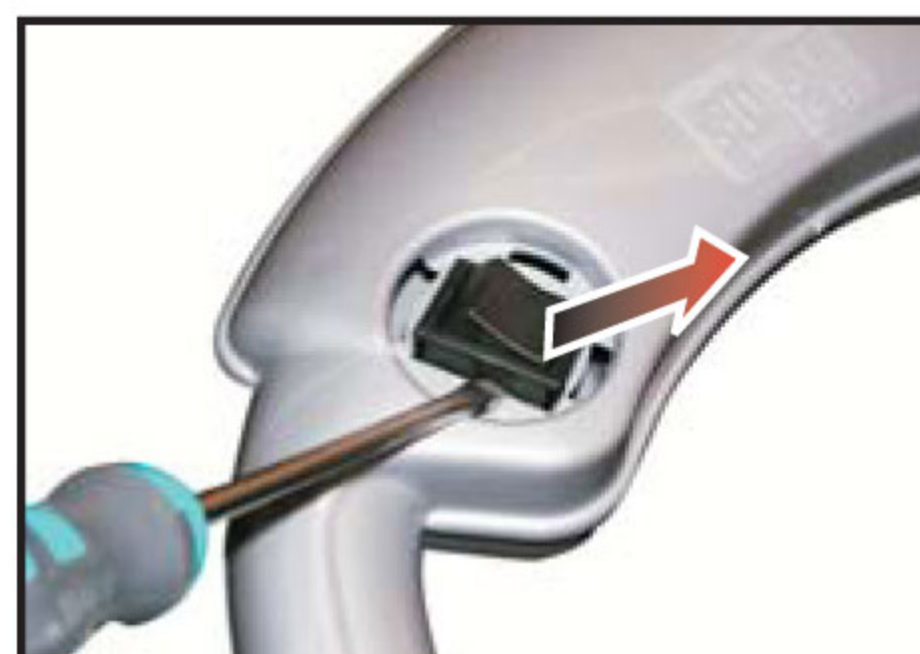

2. Remove the switch that doesn't work.




3. Disconnect the button switch and replace it with a new one. Re-assemble in reverse order.

## Replacement of the charge wiring



1. Lift out the cover to disconnect the plugs.

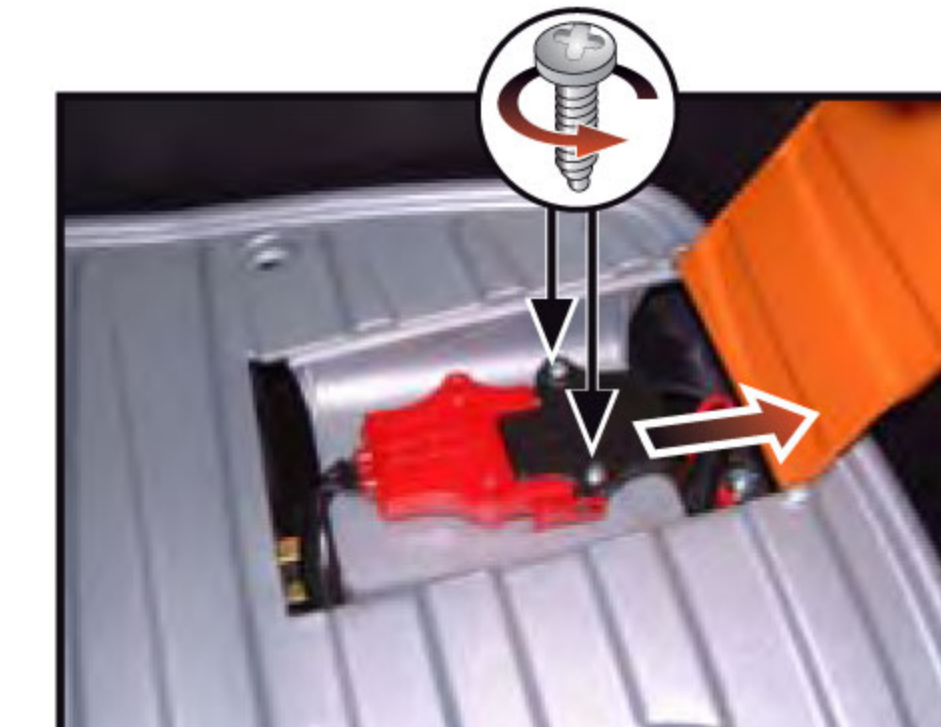

2. Unscrew the 2 screws of the black plug and disconnect from the red plug.



3. Unscrew the 4 screws from the dareway base.



4. Unscrew the axle.



5. Disconnect the wires from the battery.



6. Replace the wires and re-assemble in reverse order. Note: Pay attention to connecting the wires to the proper polarity marked on the battery.

## Replacement of the small wheel



1. Remove the aranlock from the axle of the small wheel.



2. Remove the axle from the wheel.



3. Remove the wheel which does not work, replace it with a new one. Re-assemble in the reverse order.